



Strolling Kit for Track'r™ Pet Bicycle Trailer Care & Use Guide



Congratulations on your purchase of the Strolling Kit for Solvit Products Track'r™ Pet Bicycle Trailer. This kit allows you to quickly convert your pet trailer to a pet stroller. A Phillips screwdriver and a wrench or pair of pliers are required.

Assembly:

Step 1: Make sure the tow bar is locked into place in the “storage” position under the trailer.

Step 2: Attach the front wheel assembly: Slide the short square tube on the front wheel assembly over the matching tube at the lower front edge of the stroller cabin. Align the holes in each tube, install the “quick release” pin and tighten fully.

Locking/unlocking front wheel: For best maneuverability and convenience, leave the front wheel in the swiveling mode, even while jogging. The front wheel can be locked into either of two positions (“full forward” or “full rearward”) by pulling up and rotating the lock knob at the top of the wheel assembly. The knob is in the “locked” position when the molded ribs are facing forward. To return to swiveling mode, pull the lock knob up and rotate 180 degrees so the molded ribs face rearward.

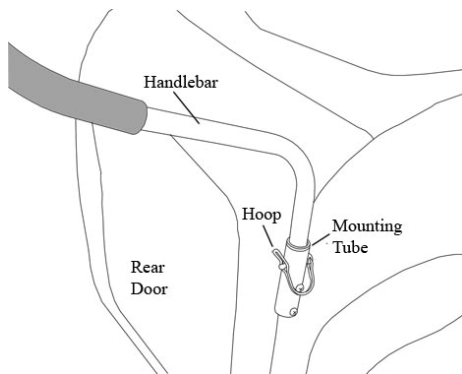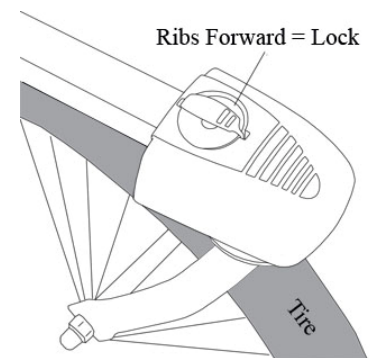

Step 3: Attach the handlebar: The two 4-inch handlebar mounting tubes attach to the frame on the rear panel. With the open end of the mounting tube facing up, align the holes on the tube to the holes on the frame. Insert screws through the tube and frame and attach 10mm nuts from the inside of the cabin. Tighten using a screwdriver and wrench. Slide the ends of the handlebars into the mounting tubes, align the holes, and insert the lock pins with the head of the lock pins facing forward. Secure the wire hoop on each lock pin.

WARNING: Always make sure the rear door is closed fully after your pet has been loaded and the jogger is in use.

Safety:

- The trailer is equipped with reflectors at the rear of the cabin and on each wheel. There are also reflective strips across the top rear and lower front of the cabin. When using your stroller at dusk or after, use a battery powered light on the jogger.
- The stroller is intended to carry pets only. No human passengers!
- Always stroll or jog with the rear door closed. When riding, your dog should always be secured with the safety leash adjusted to the correct length.
- Do not exceed the recommended weight capacity. Check tire inflation before every ride.

SOLVIT Products, LP ♦ 6720 Exchange Drive ♦ Mansfield, TX 76063
Tel: 866-6-SOLVIT (866-676-5848) ♦ Fax: (817) 466-2291
Email: customerservice@solvitproducts.com ♦ www.solvitproducts.com